

 
SETTING CAR RADIO



CAR RADIO CONFIGURATION

After having installed the interface, you would need to configure the C100 according to the car radio brand by choosing the dedicated software. Please follow the procedures explained below and note that by default, C100 is usually set for ALPINE car radios.

- Open the unit
 - Press LONG and hold the key (1) until the LED light (2) stays still
 - then release the key (1)
 - Repeatedly press SHORTLY the key (1) until you reach the number of flashes needed
 - Now press LONG the key (1) again, until the LED light (2) stays still
- Once this procedure is over, disconnect and reconnect the unit.




CAR RADIO	1	2	3	4	5	6	7	8	9	10	11	12
ALPINE												
KENWOOD												
PIONEER												
JVC												
SONY												
LG												
CLARION												
BLAUPUNKT												
PHONOCAR VM030.031												
PHONOCAR VM040												
PHONOCAR VM017												
PHONOCAR VM020.021.022												

SERVICES





CAN BUS CABLES CONNECTIONS

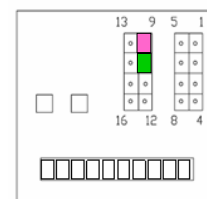

FAKRA




 SWITCHES SETTING

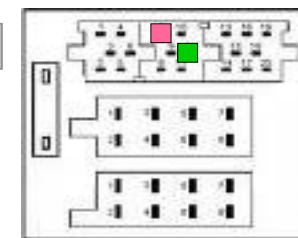


ISO

CAR RADIO CONNECTOR

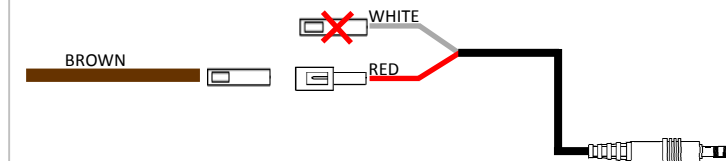

ALPINE, CLARION, JVC, PHONOCAR VM 017.020.021.022.030.031.

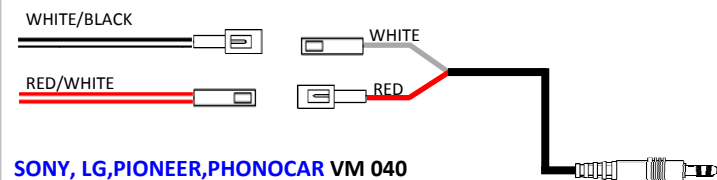

SONY, LG, PIONEER, PHONOCAR VM 040

With some brands of radios, such as Kenwood is not necessary use the jack provided. Just connect the **BROWN** wire the wire of the radio steering wheel controls.

