



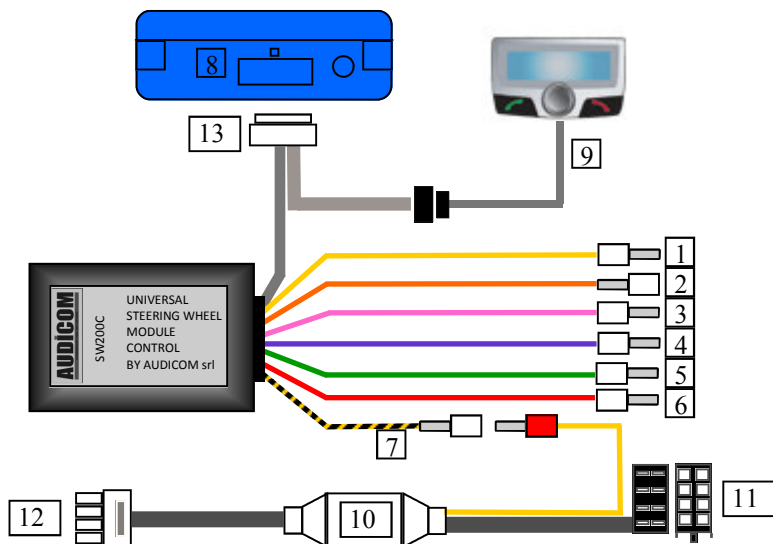


1	YELLOW = MUTE OUT connect to the radio mute cable
2	ORANGE = ignition lead + 15 connect to CK3100 orange wire
3	PINK = CAN BUS High line
4	VIOLET = K-BUS DO NOT CONNECT
5	GREEN = CAN BUS Low line
6	RED = connect to a positive
7	YELLOW /BLACK = MUTE IN to Parrot (10) yellow mute cable
8	PARROT CK 3100 UNIT
9	PARROT CK3100 DISPLAY
10	PARROT MUTE RELAY
11	LOUDSPEAKERS OUTPUT
12	TO PARROT CK3100 HANDS-FREE CAR KIT
13	TO PARROT CK3100 HANDS-FREE CAR KIT

CAN BUS E MUTE POSITIONS

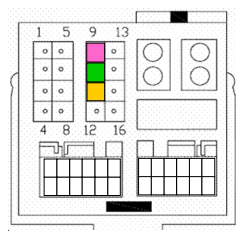

AUDI
with navigator system
(naviplus)
<2008

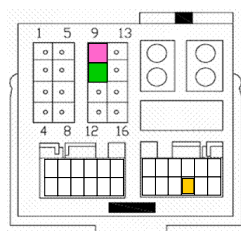


AUDI
2008>
WITHOUT AMPLIFIER




AUDI
Concert, Symphony,
Delta, Gamma

CAM BUS H CAM BUS L MUTE

SWITCHES SETTING

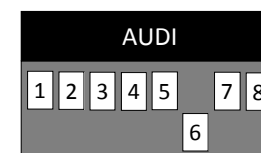

THE CAN BUS LINE COLOR ARE: ORANGE/BROWN and ORANGE/GREEN

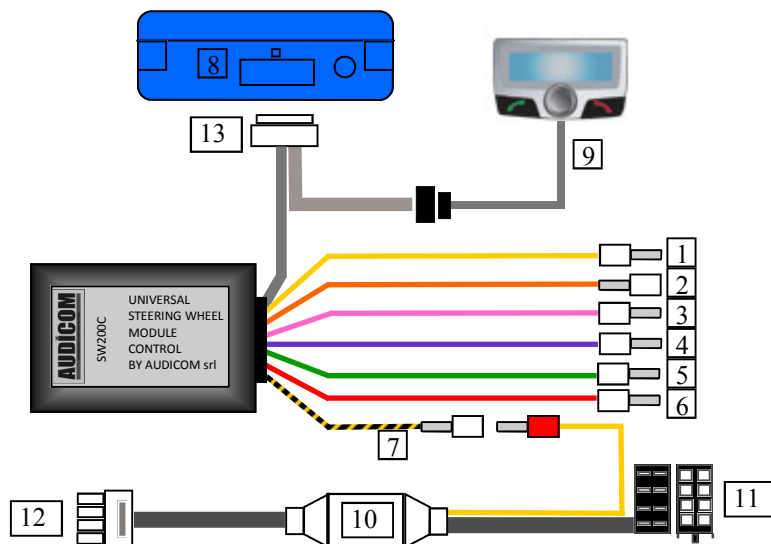


1	YELLOW = MUTE OUT connect to the mute cable CP201/CP203	1
2	ORANGE = ignition lead + 15 connect to CP201/CP203	2
3	PINK = CAN BUS High line	
4	VIOLET = K-BUS DO NOT CONNECT	
5	GREEN = CAN BUS Low line	
6	RED = connect to a positive	
7	YELLOW /BLACK = MUTE IN to Parrot (10) yellow mute cable	
8	PARROT CK 3100 UNIT	
9	PARROT CK3100 DISPLAY	
10	PARROT MUTE RELAY	
11	LOUDSPEAKERS OUTPUT CP201/CP203	
12	TO PARROT CK3100 HANDS-FREE CAR KIT	
13	TO PARROT CK3100 HANDS-FREE CAR KIT	

CP201/CP203




A4 2006>
A6 2004>
Q7 2006>

WITH AMPLIFIER:
BOSE SYSTEM 6000 13 LOUDSPEAKERS (CP201)
BOSE SYSTEM "**BLACK EDITION**" 13 LOUDSPEAKERS (CP203)

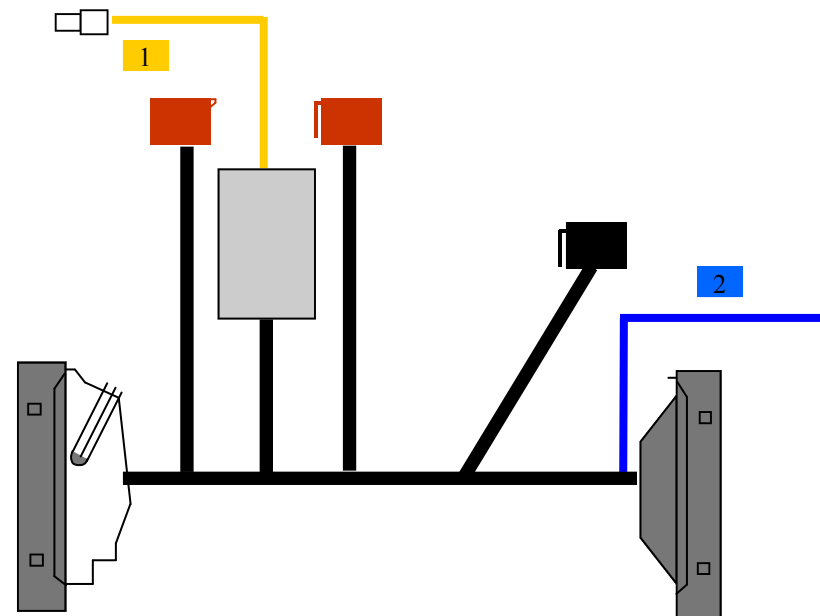

THE CAN BUS LINE COLOR ARE: **ORANGE/BROWN** and **ORANGE/GREEN**

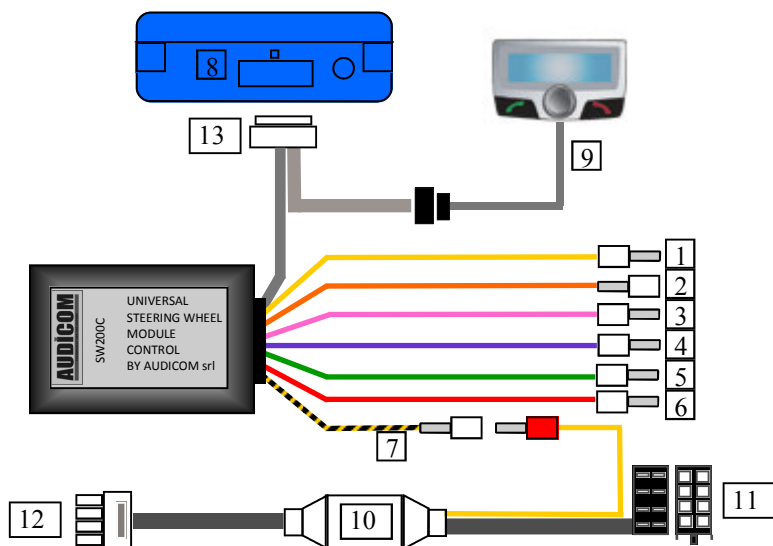


1	YELLOW = MUTE OUT connect to the mute cable CP202 1
2	ORANGE = ignition lead +15 connect to CP202 2
3	PINK = CAN BUS High line
4	VIOLET = K-BUS DO NOT CONNECT
5	GREEN = CAN BUS Low line
6	RED = connect to a positive
7	YELLOW /BLACK = MUTE IN to Parrot (10) yellow mute cable
8	PARROT CK 3100 UNIT
9	PARROT CK3100 DISPLAY
10	PARROT MUTE RELAY
11	LOUDSPEAKERS OUTPUT CP202
12	TO PARROT CK3100 HANDS-FREE CAR KIT
13	TO PARROT CK3100 HANDS-FREE CAR KIT

CP202




A4 2006>
A6 2006>
Q7 2006>

WITH AMPLIFIER
MMI & MMI BASIC PLUS DSP SYSTEM

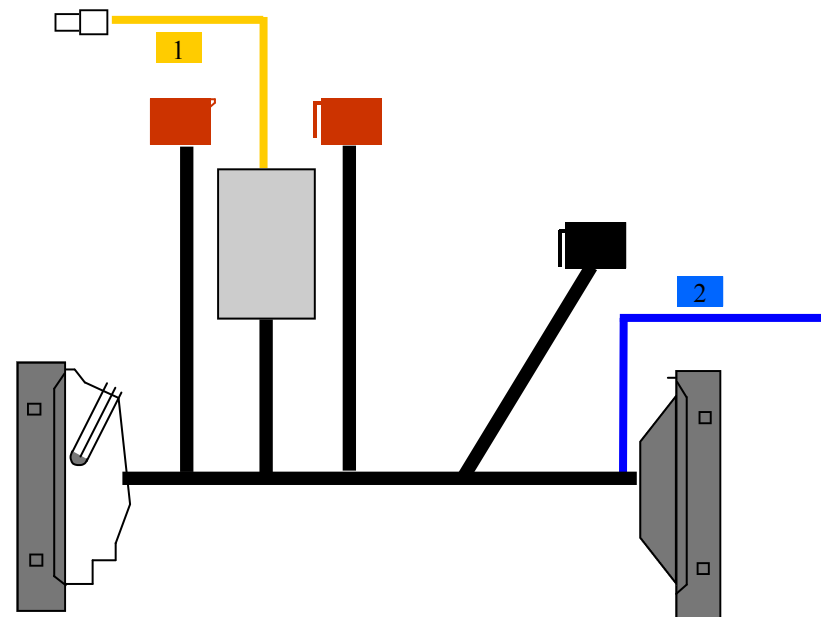

THE CAN BUS LINE COLOR ARE: **ORANGE/BROWN** and **ORANGE/GREEN**

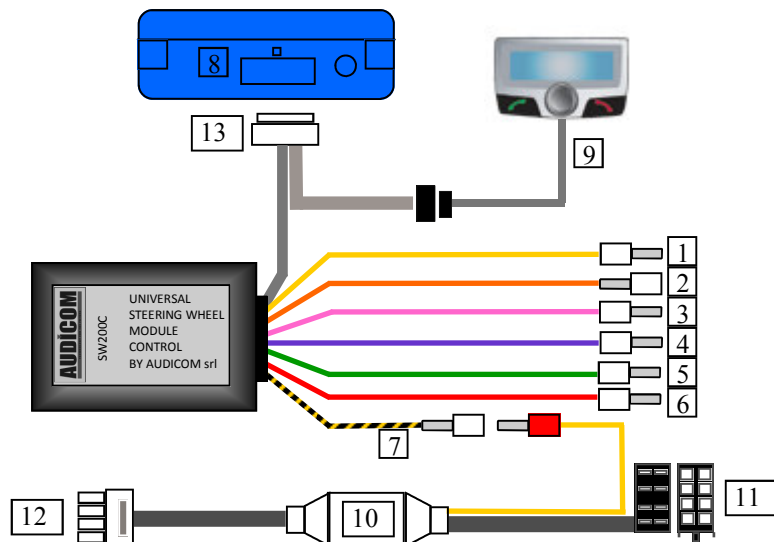


1	YELLOW = MUTE OUT connect to the mute cable CP204	1
2	ORANGE = ignition lead + 15 connect to CP204	2
3	PINK = CAN BUS High line	
4	VIOLET = K-BUS DO NOT CONNECT	
5	GREEN = CAN BUS Low line	
6	RED = connect to a positive	
7	YELLOW /BLACK = MUTE IN to Parrot (10) yellow mute cable	
8	PARROT CK 3100 UNIT	
9	PARROT CK3100 DISPLAY	
10	PARROT MUTE RELAY	
11	LOUDSPEAKERS OUTPUT CP204	
12	TO PARROT CK3100 HANDS-FREE CAR KIT	
13	TO PARROT CK3100 HANDS-FREE CAR KIT	

CP204




A8 2006>


BOSE 6000 SYSTEM
E 14 SPEAKERS

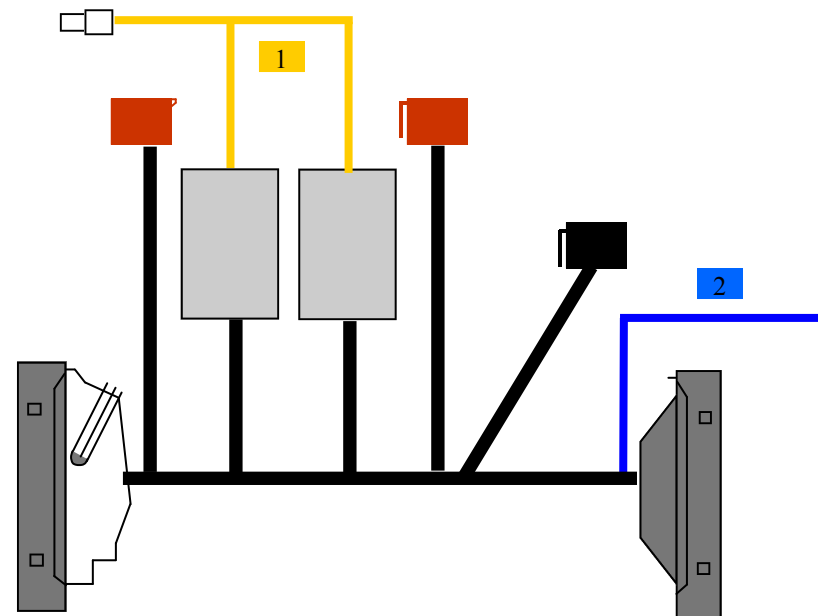


THE CAN BUS LINE COLOR ARE: **ORANGE/BROWN** and **ORANGE/GREEN**

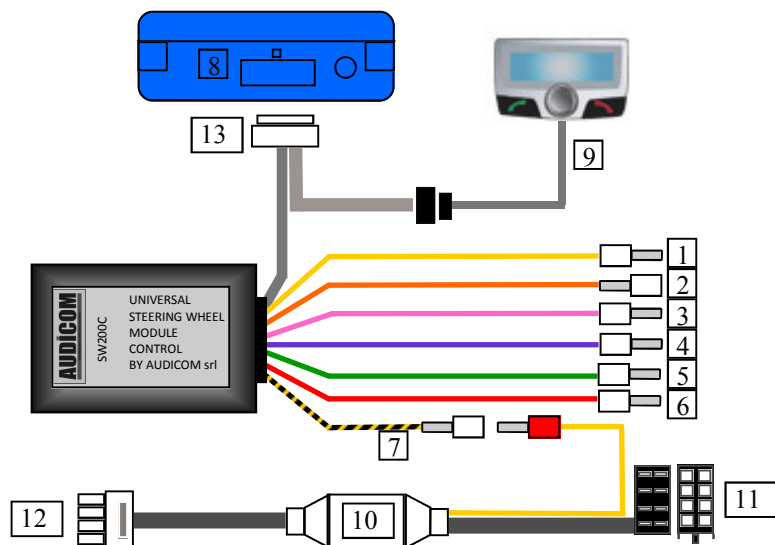



1	YELLOW = MUTE OUT connect to the mute RADIO cable
2	ORANGE = ignition lead + 15 connect to CP205 2
3	PINK = CAN BUS High line
4	VIOLET = K-BUS DO NOT CONNECT
5	GREEN = CAN BUS Low line
6	RED = connect to a positive
7	YELLOW /BLACK = MUTE IN to Parrot (10) yellow mute cable
8	PARROT CK 3100 UNIT
9	PARROT CK3100 DISPLAY
10	PARROT MUTE RELAY
11	LOUDSPEAKERS OUTPUT CP205
12	TO PARROT CK3100 HANDS-FREE CAR KIT
13	TO PARROT CK3100 HANDS-FREE CAR KIT

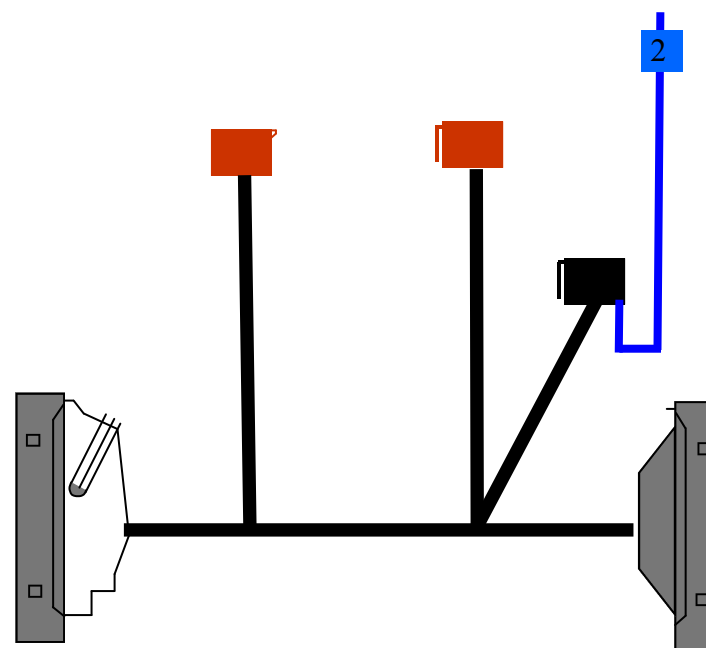


THE CAN BUS LINE COLOR ARE: **ORANGE/BROWN** and **ORANGE/GREEN**

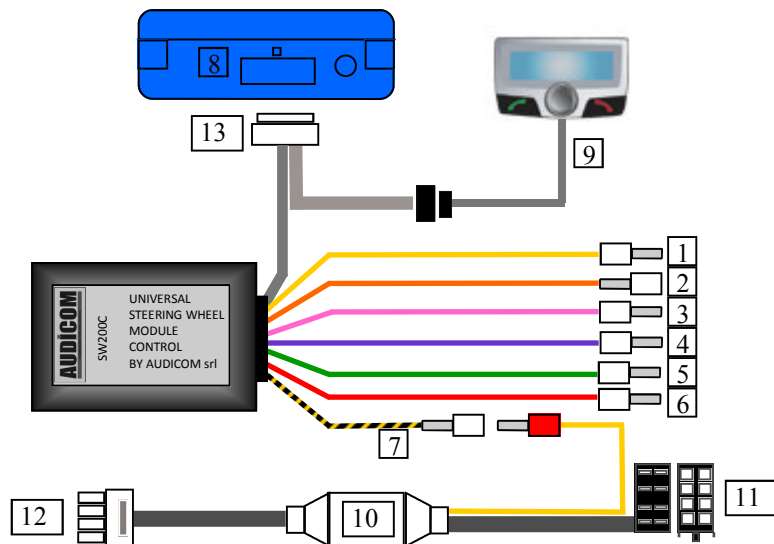

1	YELLOW = MUTE OUT connect to the mute cable CP207	1
2	ORANGE = ignition lead + 15 connect to CP207	2
3	PINK = CAN BUS High line	
4	VIOLET = K-BUS DO NOT CONNECT	
5	GREEN = CAN BUS Low line	
6	RED = connect to a positive	
7	YELLOW /BLACK = MUTE IN to Parrot (10) yellow mute cable	
8	PARROT CK 3100 UNIT	
9	PARROT CK3100 DISPLAY	
10	PARROT MUTE RELAY	
11	LOUDSPEAKERS OUTPUT CP207	
12	TO PARROT CK3100 HANDS-FREE CAR KIT	
13	TO PARROT CK3100 HANDS-FREE CAR KIT	

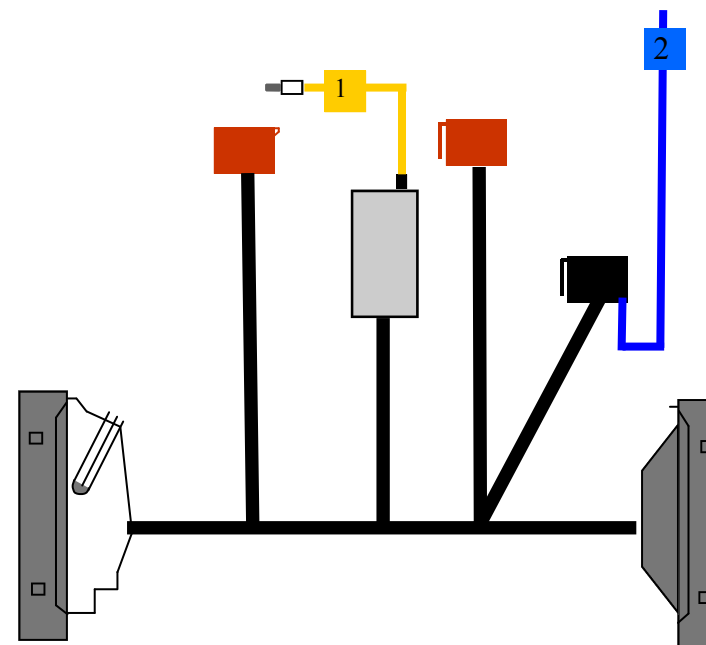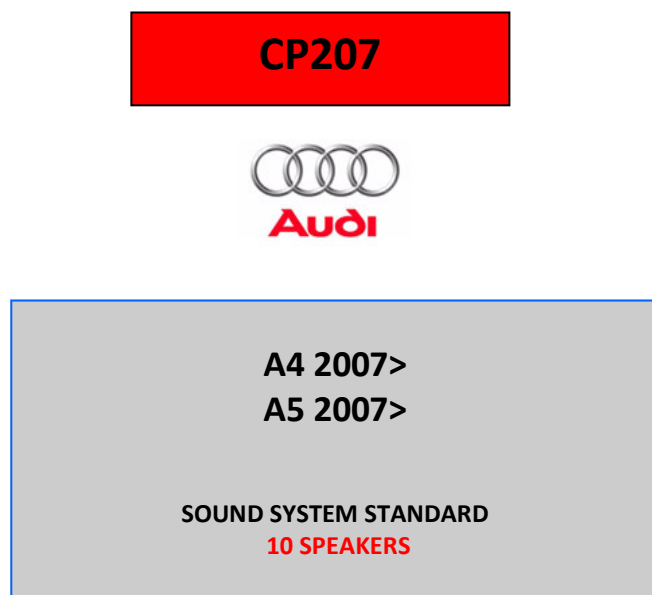

THE CAN BUS LINE COLOR ARE: **ORANGE/BROWN** and **ORANGE/GREEN**

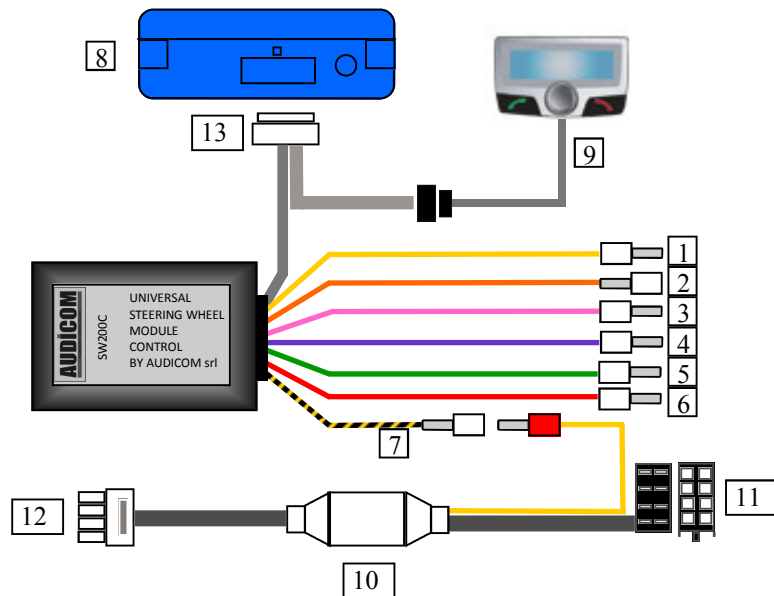


1	YELLOW = MUTE OUT connect to the mute cable CP208	1
2	ORANGE = ignition lead + 15 connect to CP208	2
3	PINK = CAN BUS High line	
4	VIOLET = K-BUS DO NOT CONNECT	
5	GREEN = CAN BUS Low line	
6	RED = connect to a positive	
7	YELLOW /BLACK = MUTE IN to Parrot (10) yellow mute cable	
8	PARROT CK 3100 UNIT	
9	PARROT CK3100 DISPLAY	
10	PARROT MUTE RELAY	
11	LOUDSPEAKERS OUTPUT CP208	
12	TO PARROT CK3100 HANDS-FREE CAR KIT	
13	TO PARROT CK3100 HANDS-FREE CAR KIT	

CP208



A4 2007>
A5 2007>
R8 2007>

B & O SOUND SYSTEM PREMIUM
14 SPEAKERS

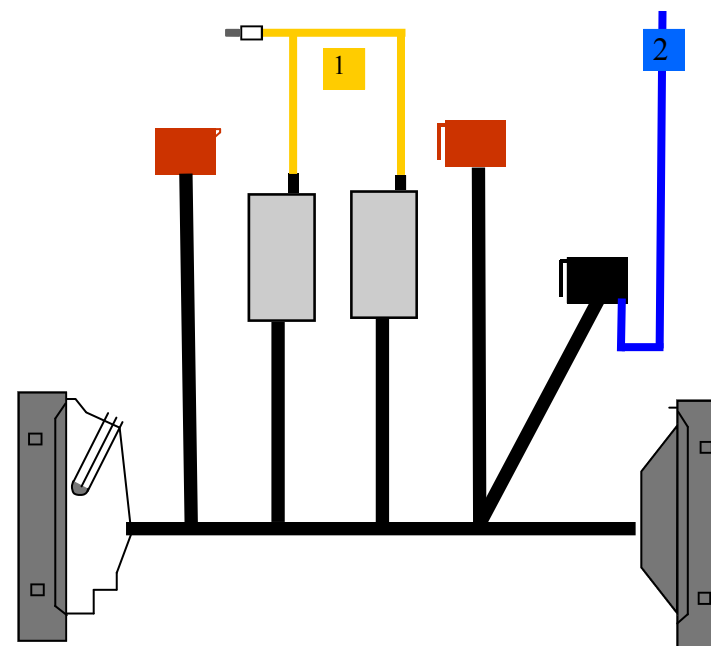

THE CAN BUS LINE COLOR ARE: **ORANGE/BROWN** and **ORANGE/GREEN**