



MKi9100

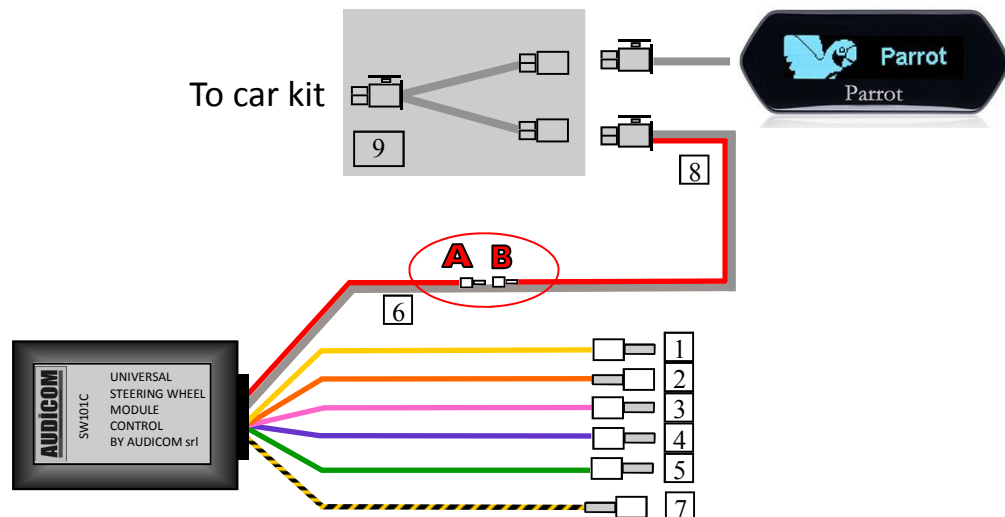

SW101C is provided with an ignition lead, "ORANGE WIRE" which has to be connected to the car kit, to get this output, first disconnect A and B connectors, as shown in the picture, then connect to a 12V permanent wire A and insulate wire B.


INSTALLATION WITH MUTE CABLE "EASYPLUG" CP200MP9

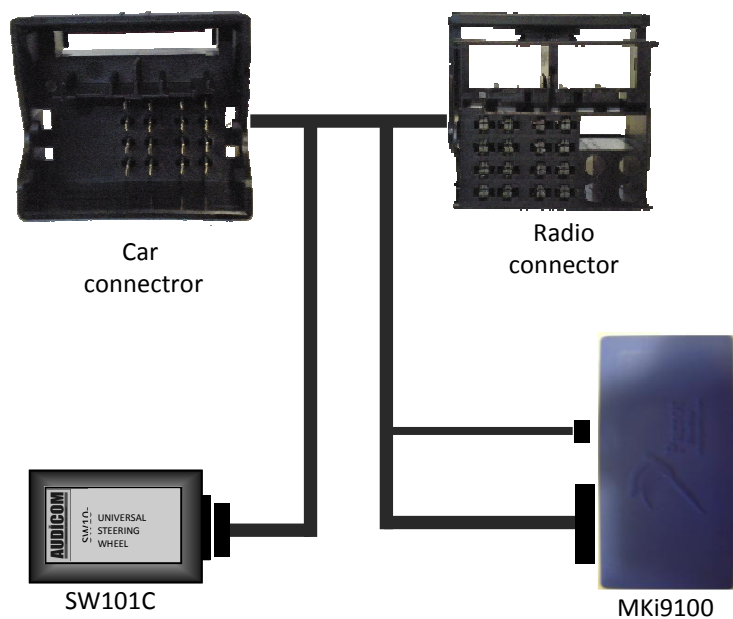

CONNECTIONS

- 1 Yellow = MUTE OUT connect to car radio mute cable (YELLOW)
- 2 Orange = ignition lead + 15V CAN BUS **(OUTPUT)**
- 3 Pink = CAN BUS H line to can bus wire **BROWN/RED**
- 4 Violet = **DO NOT CONNECT**
- 5 Green = CAN BUS L line to can bus wire **BROWN**
- 6 Red = 12V Permanent (INPUT)
- 7 Yellow/black = MUTE IN to Parrot yellow mute cable
- 8 To CPY6100
- 9 CPY 6100 by-pass cable for car kit and display

CAN BUS & MUTE POSITIONS

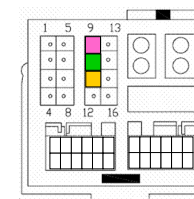

Pink CAN BUS H

Green CAN BUS L

Yellow MUTE

SWITCHES SETTING

